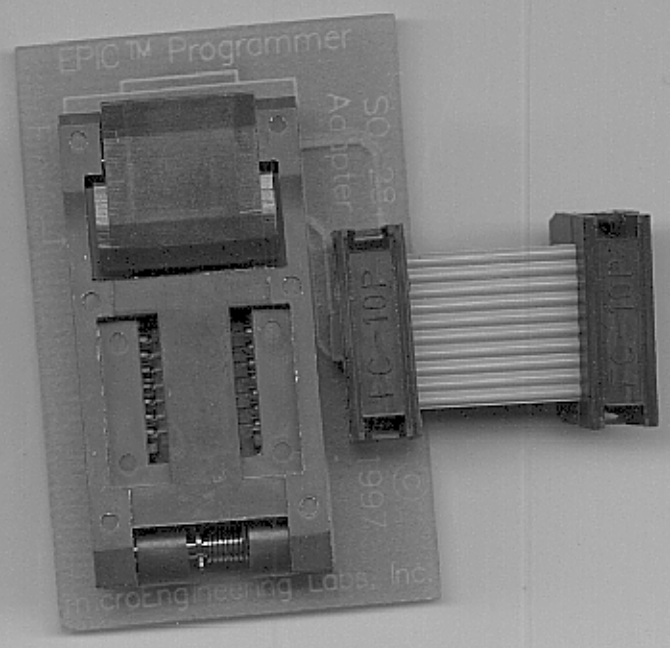

EPIC 28 Pin SOIC Adapter

Copyright ©1997 microEngineering Labs, Inc.

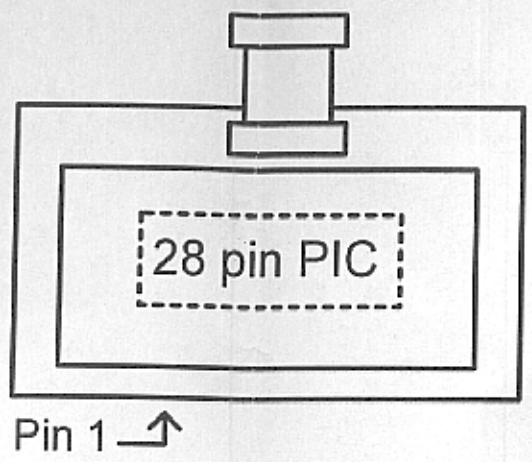

USE:

Plug the 28 Pin SOIC Adapter into the 10-pin header near the bottom of the EPIC Programmer. Make sure the EPIC Programmer is powered up and the EPIC software is running before inserting a PIC into the 28 Pin SOIC Adapter.

To insert a PIC into the adapter, push the lever on the top of the socket. Position the PIC with pin 1 all the way toward the lever end of the socket and push down the top to lock the PIC in place.